


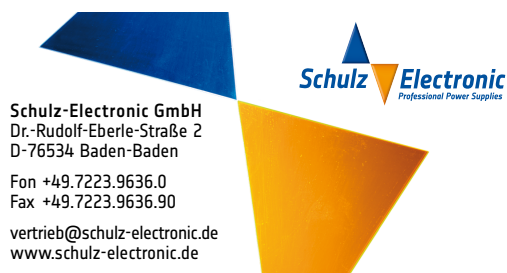

## PC1000-PC2000 INSTALLATION MANUAL



# PC1000 / PC1400 / PC2000 Installation manual



*Mailing address*  
Box 229  
SE-597 25 ÄTVIDABERG  
*Main residence:* Sollentuna

*Visit/Shipping*  
Bäckgatan 10  
SE-597 53 ÄTVIDABERG

[http:// www.polyamp.com](http://www.polyamp.com) e-mail: [info@polyamp.se](mailto:info@polyamp.se)

*Telephone* +46 120 85400  
*Telefax* +46 120 85405

10275-5.doc/ AÅ  
Postalgiro: 68 13 25-7  
Merita NB: 3259-18-01290  
SEB: 5403-10-05571  
VAT.no: SE556103276301

## Warranty

All Polyamp DC/DC converters are warranted against defective material and workmanship. This warranty is valid for 24 months from the date of delivery. We will repair or replace products which prove to be defective during the warranty period. The warranty is valid only if the converter is used within specification.

## Manual

This manual is as complete and actual as possible at the time of printing. However, the information may have been updated since then. Polyamp AB reserves the right to make changes in this manual without notice.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance instructions in the literature accompanying



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons

### Caution!

To prevent the risk of electric shock, do not open enclosure. No serviceable parts inside. Refer servicing to qualified service personnel only

## **CONTENTS**

<b>1 BEFORE INSTALLATION.....</b>	<b>4</b>
<b>2 INSTALLATION.....</b>	<b>5</b>
<b>3 PARALLEL CONNECTION.....</b>	<b>6</b>
3.1 SERIES DIODE ON THE OUTPUT.....	6
3.2 CURRENT SHARING.....	6
3.3 VOLTAGE ADJUSTMENT WITH CURRENT SHARING.....	7
<b>4 MULTIPLE LOADS AT THE OUTPUT.....</b>	<b>7</b>
4.1 SHORT-CIRCUITS.....	7
<b>5 ALARM.....</b>	<b>8</b>
5.1 OVER AND UNDER VOLTAGE ALARM.....	8
5.2 OVER TEMPERATURE.....	9
<b>6 SENSE.....</b>	<b>9</b>
6.1 EXTERNAL SENSE.....	9
<b>7 INHIBIT.....</b>	<b>9</b>
<b>8 OUTPUT OVER VOLTAGE PROTECTION.....</b>	<b>9</b>
<b>9 INRUSH CURRENT LIMIT.....</b>	<b>10</b>
<b>10 ISOLATION VOLTAGE TEST.....</b>	<b>10</b>
10.1 DC ISOLATION TEST OUTPUT TO CASE.....	10
10.2 DC ISOLATION TEST INPUT TO OUTPUT AND INPUT TO CASE.....	10
10.3 AC ISOLATION TEST INPUT TO OUTPUT AND INPUT TO CASE.....	10
<b>11 MAINTENANCE.....</b>	<b>11</b>
<b>12 TROUBLE SHOOTING.....</b>	<b>11</b>
12.1 THERE IS NO OUTPUT VOLTAGE.....	11
12.2 THE INPUT FUSE BLOWS WHEN THE INPUT IS CONNECTED.....	11
12.3 THE CONVERTER STARTS AND STOPS REPEATEDLY.....	11
12.4 THE CONVERTER STOPS AFTER SEVERAL HOURS.....	11
12.5 FAULT REPORT.....	12

## 1 Before installation

Before installation we recommend that you read this and next section of this manual. If any problem occurs, consult *12 Trouble shooting*.

If the converter includes a fan, please notice *11 Maintenance*.

On the front panel label the following is displayed: Converter type, input voltage range, nominal output voltage, serial number, options and article number. The converter type name consists of model name PC1000, PC1400 or PC2000 followed by input code and output voltage. Two examples:

- **Type: “PC2000 110/48” has input code “110” and nominal output voltage 48Vd.c.**
- **”Type: “PC1000 24/24” has input code “24” and nominal output voltage 24Vd.c.**

If you intend to parallel connect the output, please check that option C is supplied. It means series diode on output.

Input, output and case are galvanically separated from each other. You can thus choose how you want the system connected.

The output can be connected with any pole to protective earth or as a floating output with max  $\pm 150V$  to the protective earth. It means that maximum 3 units can be put in series.

The electrical safety system is a class I, which means that protective earth has to be connected. The 110 and 220 input code models can also be used as class II equipment without protective earth. Although units installed in dirty environments shall be connected to protective earth.

On 110 and 220 input code the feeding system can be defined as Primary circuit (Max 250Va.c.) and as Secondary circuit.

On 24 and 48 input code the feeding system can be defined as Secondary circuit voltage, and SELV voltage.

The cables used for input and output feeding shall be dimensioned to fit the fuse rating and continuous current as well as intended ambient temperature range and insulations demand due to the voltage used.

The input is protected against reverse polarity by combination circuit with inrush current

limit circuit. If reverse voltage occurs at installation the converter will not start. The reverse voltage will not cause damage to the unit.

The input shall be fused with an approved fuse with high breaking capacity. We recommend following fuses ratings and fuses. Please note that in installation class I with protective earth, the fuse shall be on the pole not in connection with the protective earth.

**PC1000 input fuses**

Input voltage code	Time delay fuse
24	63 A, Siemens 3NA3 022
48	35 A, Siemens 3NA3 014
110	16 A, Siemens 3NA3 005
220	10 A, Siemens 3NA3 003

**PC1400 input fuses**

Input voltage code	Time delay fuse
48	50 A, Siemens 3NA3 020
110	20 A, Siemens 3NA3 007
220	10 A, Siemens 3NA3 003

**PC2000 input fuses**

Input voltage code	Time delay fuse
48	63 A, Siemens 3NA3 022
110	25 A Siemens 3NA3 010
220	16 A, Siemens 3NA3 005

**Table 1. Recommended input fuses.**

There are two reasons we do not include the fuse.

1. DC-networks should be fused at the distribution point to protect the cable.
2. Different applications require different types of fuses.

To meet the EMC specifications in the enclosed “declaration of conformity” use twisted-pairs for connecting input, output, alarm, inhibit and voltage sense. Shielded cables are not necessary.

If the converter is mounted in an electric vehicle, an external series diode on the input is recommended. Please contact your Polyamp dealer.

If the converter supplies a DC-motor, we recommend an external parallel diode at the motor poles to protect against reverse voltages.

For the disconnection ability, an external disconnection device, which is able to disconnect both polarities, shall be incorporated with the input power supply cord. The disconnection device must be properly labelled and easy accessible.

## 2 Installation

The converter is supplied with mounting brackets intended for 19"-rack mounting. The PC1000 converter is convection cooled and in order to get sufficient cooling there shall be a minimum of >30 mm space around the unit except for the sides. PC1000 is only intended for horizontal mounting.

PC1400 and PC2000 use an internal fan and need therefore minimum >30mm space around the unit except for the sides. The cooling fins at the rear shall never be covered. The fan cooled versions can be mounted in any direction. For mounting plate or chassis mounting please use the L220-1 brackets.


Note that the expected life of the converter is dependant on converter temperature. For every 10°C that the temperature is lowered the expected life is approximately doubled. It is therefore crucial to cater for good ventilation and if possible to reduce ambient temperature.

To meet the EMC specifications in the enclosed "declaration of conformity" use twisted-pairs for connecting input, output, alarm, inhibit and voltage sense. Shielded cables are not necessary.

On 24 and 48 input code the input cables are individual. On 110 and 220 input code use a cable cord with external approved insulation for the Primary circuit and Secondary hazardous voltage rating.

1. Remove front cover with 4 screws. Do not forget to insert the cables thru the cable inlet of the front cover, before connecting. On 24 and 48 inputs use separate inlets on the bottom. On 110 and 220 input code put the cable into the upper cable inlet and fix it with the cable clamp after connection. See *Figure 1. Cable connection for 24V and 48V inputs.* And *Figure 2. Cable connection for 110V and 220V inputs.*
2. First connect protective earth in connector K3 marked with an earth symbol. Then connect the input.
3. Connect the output. The converter output is short-circuit proof by a constant current limit which works unlimited in time. Therefore there is no need to fuse the load (unless you use multiple loads, see below). The current limit is fixed to 105% of nominal output current.
  - If the converter is to be connected in parallel at the output or if you use current sharing for equal current sharing, please consult *3 Parallel connection* on page 6.
  - If you intend to use multiple loads, please consult *4 Multiple loads at the output* on page 7.
  - If you intend to use the alarm, please consult *5 Alarm* on page 8.
  - If you intend to use output voltage sense, please consult *6 Sense* on page 9.
  - If you intend to use inhibit, please consult *7 Inhibit* on page 9.
4. Mount the front cover
5. Start the converter with your external input disconnection device.
  - The output voltage can be adjusted +10% to -5% of nominal output voltage with the potentiometer marked V.ADJ on the front panel. Clockwise turn increases the output voltage. The potentiometer has 15 turns. If you are using current sharing, the procedure of adjusting the output voltage is described in *3.3 Voltage adjustment with current sharing* on page 7.
6. When the converter is to be disconnected, switch-off the input voltage with the disconnecting unit. Disconnect the input

cables first, then output and last the protective case connection.

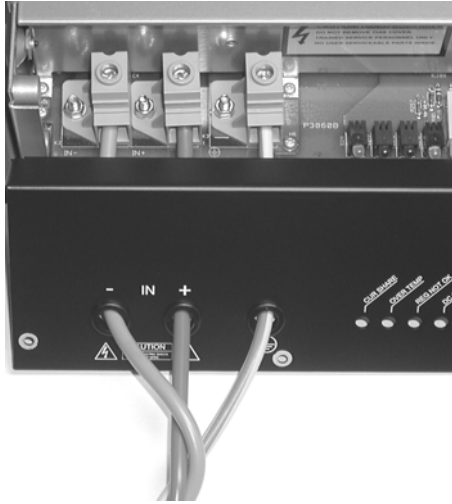

**Figure 1. Cable connection for 24V and 48V inputs.**



**Figure 2. Cable connection for 110V and 220V inputs.**

### 3 Parallel connection

If a redundant power supply system is requested, two or more converters can be connected in parallel. To achieve redundancy the number of converters must be dimensioned to carry the whole load even if one converter is faulty. The unit you will install must be equipped with option C series diode, please check on the type code label.

You should **not use external sense** when there are several units connected in parallel on the output.

#### 3.1 Series diode on the output

The series diode protects the converter output from external voltage sources. A series diode is necessary if the output is connected in parallel with another power supply or if you require redundant operation. If a converter breaks down with an internal short-circuit on the output and other converters are connected in parallel on the output, the broken unit will short-circuit the others if the series diode is not used. This might cause excessive heat or even fire in the faulty unit.

If the series diode is used, the alarm relay will switch to “ALARM” on the faulty unit if one converter breaks down in a redundant power supply system. Otherwise there will be no alarm indication from a faulty converter unless all units are in current limit and the output voltage drops 10% below nominal output voltage.

On models with option C the output power of the converter is derated. See data sheet.

- On 24Vd.c. output by 10%.
- On 48Vd.c. output by 5%.

Do not forget to fuse the inputs separately to achieve redundancy.

#### 3.2 Current sharing

All models include the automatic current sharing feature, which we recommend to use in parallel configuration. A maximum of 10 units can be connected in parallel.

If more than 10 units should be connected in parallel, contact Polyamp.

Connect a cable (0.25-1.0mm<sup>2</sup>) with a maximum length of 3.0m between the “CURRENT SHARE” connectors of all units.


The converter with the highest output voltage will then automatically become “current master”. This converter will then run with a few percent higher output current than the others. If the master converter for some reason breaks down, another converter automatically becomes “current master”.

To achieve good power sharing, the voltage drop between the minus poles must be kept as low as possible, see *Figure 3*. It is important that all cables between the converters and the distribution point has the same length. The plus poles can either be connected as in *Figure 3* or have separate cables to the load.

At light load (if the total load is less than 5% of the total rated power) the yellow “CUR. SHARE” LED might flicker between the units. As the load changes different units “CUR. SHARE” LED might be lit. All this is normal.

During normal operation in a paralleled system the “CUR. SHARE” LED is lit on at least one unit, but it may be lit on some or all of the paralleled units. The purpose of the “CUR. SHARE” LED is not to indicate if current share is working or not, but to facilitate the voltage adjustment, see below.

Parallel output connection of several converters powered by two input voltage sources. See *Figure 9*.

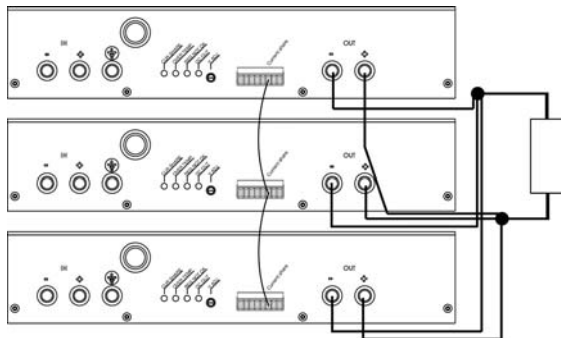

**Figure 3. Current share connection with series diode.**

### 3.3 Voltage adjustment with current sharing

The converters must be running with 5% of nom. load or more, and the “current share” must be connected. If each converter output voltage is adjusted to the same voltage, which they are at delivery, the yellow “CUR. SHARE” LED might be lit on most units.

To **increase** the output voltage:

1. Choose a unit where the “CUR. SHARE” LED is lit. Turn the V.ADJ potentiometer clockwise until you reach your desired output voltage.

2. The other units should now also be adjusted to approximately the same output voltage, otherwise the output voltage will drop if the master converter breaks down. Turn the V.ADJ potentiometer slowly clockwise on the other units until the “CUR. SHARE” LED is lit or almost lit.

To **decrease** the output voltage:

1. Turn the V.ADJ potentiometer approximately one (1) turn counter clockwise on all converters but one. This will not affect the output voltage yet.
2. Turn the V.ADJ potentiometer counter clockwise on the remaining converter (if your load current exceeds 5% of the total rated current, this should be the only unit with the “CUR. SHARE” LED lit) until you reach the output voltage you desire. (If you turn more than one (1) turn counter clockwise you must repeat from step 1).
3. The other units should now also be adjusted to approximately the same output voltage. Otherwise the output voltage will drop if the master converter breaks down. Turn clockwise on the V.ADJ potentiometer on the other units slowly until the “CUR. SHARE” LED is lit or almost lit.

## 4 Multiple loads at the output

If you are using several loads, we recommend fusing them separately with fast acting fuses on the positive output branch. Some considerations regarding short-circuits should be taken. See below.

### 4.1 Short-circuits

1. If there is a short-circuit in one branch and the total current in all branches **does not** exceed 105% of the nominal current of the converter (see label on front panel), the output voltage will not be affected. The time for the fuse to blow can be calculated from the data sheet of the fuse if you know the short-circuit current through the fuse.
2. If there is a short-circuit in one branch and the total current in all branches **does** exceed 105% of the nominal current of the converter, the output voltage will drop until the fuse is blown. Depending on the impedance of the short-circuit (whether it is

abrupt or merely an overload) and the resistance of the load cables, the effects of a short-circuit will vary.

Long cables reduce short-circuit currents, resulting in longer delay until the fuse is blown and hence an increased voltage dip. Light overload does not necessarily result in a blown fuse.

To reduce the voltage drop at short-circuit and if any branch has more than approximately 30% of the total output current of the converter, a large external capacitor is recommended. Such a capacitor will supply the peak current needed to blow the fuse, see *Figure 4*. To calculate the capacitor needed, use the following formula:

$$C = 1.2 \times (I_S \times \Delta t) / \Delta U$$

1.2 = Safety margin.

$I_S$  = Short-circuit current through the fuse.

$\Delta t$  = Time before the fuse blows (see data sheet on the fuse).

$\Delta U$  = Acceptable voltage dip before the fuse blows.

### Example

You have a 5A fuse with fast characteristic and the short-circuit current is 50A. The data sheet gives you that  $\Delta t = 10\text{ms}$ . The output voltage is 24V, and you can accept 10% voltage drop  $\Rightarrow \Delta U = 24 \times 0.1 = 2.4\text{V}$ .

The capacitance you need:


$$C = 1.2 \times (I_S \times \Delta t) / \Delta U = 1.2 \times 50 \times 0.01 / 2.4 = 250,000\mu\text{F}$$

Choose a capacitance with a rated voltage of at least 115% of nominal output voltage of the converter.

Repeat this calculation for all branches and choose the highest capacitance value.

- It is sometimes difficult to estimate the short-circuit current when the nature of a fault is unknown. In this case a voltage dip might appear under some short-circuit

conditions even with a large capacitor present. If a voltage dip is critical in one branch it is recommended to use a separate DC/DC converter supplying this branch.

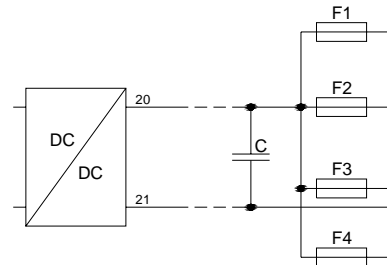

**Figure 4. Connecting multiple loads.**

## 5 Alarm

The alarm relay switches to “ALARM” state if:

- The output voltage is not within +15% /- 10% of nominal output voltage.
- The converter is overheated.

Otherwise the relay contact is in the position “NORMAL” as printed on the front panel.

The alarm relay can be connected in two ways:

- Normally Open (NO).
  - Connect twisted-pair (0.25mm<sup>2</sup> - 1.5mm<sup>2</sup>) from centre pin of the removable alarm connector and connector pin marked “ALARM”.
- Normally Closed (NC).
  - Connect twisted-pair (0.25mm<sup>2</sup> - 1.5mm<sup>2</sup>) from centre pin of the removable alarm connector and connector pin marked “NORMAL”.

The relay is isolated 2500Vd.c. from input, output and case. The relay can switch maximum 30V/5A (a.c. and d.c. values).

### 5.1 Over and under voltage alarm

The alarm relay switches to alarm and the “REG NOT OK” LED is lit when the output voltage is approximately 15% higher or 10% lower than nominal output voltage.

### 5.2 Over temperature

All models have thermal protection. If the converter is overheated it shut down the output till the operating temperature has decreased. The "OVER TEMP" LED is lit and the alarm relay is set to alarm. This will not occur in normal operation with an ambient temperature below +55°C when the unit has sufficient cooling. The converter type PC1000 is convection cooled and there should be a minimum of 30-50mm of free space at upper and lower parts of the converter. If this is not possible, we recommend the use of an external fan.

Note that the expected life of the converter is dependant on converter temperature. For every 10°C that the temperature is decreased the expected life is approximately doubled. It is therefore crucial to cater for good ventilation and if possible reduce ambient temperature.

### 6 Sense

#### 6.1 External sense

Without external sense connected the output regulation is 0.5%. External sense is used when voltage regulation at the load is critical. The converter regulates the voltage at the load and not at the output of the converter and does thereby compensate for voltage drop in the cables between the converter and the load. The maximum voltage compensation is 5% of nominal output voltage. The regulation accuracy is 0.2% with sense.

Do not disconnect the negative power connection from the converter to the load before the positive, when the converter is running and external sense is used. This might damage the converter and it is also **not advisable for your own protection to make adjustments in the installation with voltage applied.**

1. Connect a twisted-pair (0.25mm<sup>2</sup> -1.5mm<sup>2</sup>) between the sense terminals of the converter and the load, see *Figure 5*. The sense leads and the power cables shall be of approximately the same length and drawn as close to each other as possible. **Beware of correct polarity!**

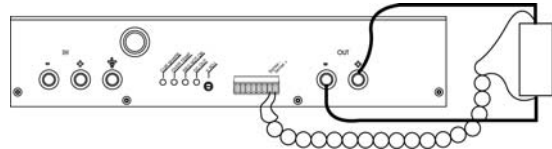


Figure 5. External sense!

### 7 Inhibit

The converter is shut-down if the inhibit input is short-circuited by a relay or an electrical switch. The current through the short-circuit is 20mA. Note that there is no electrical isolation between the "inhibit" and the output.

1. Use a twisted-pair (0.25mm<sup>2</sup> -1.5mm<sup>2</sup>) with a maximum length of 3.0m for connection of the "inhibit".

### 8 Output over voltage protection

All models are equipped with an internal output over voltage protection circuit (OVP). It consists of an additional voltage regulator operating in parallel with the main regulator. The output voltage is limited to approximately 15% above the nominal output voltage. As long as the OVP circuit is active the alarm relay is set to "ALARM" state and the red "REG NOT OK" LED is lit.

### 9 Inrush current limit

All models are equipped with an inrush current limit feature. The input capacitors are charged through a resistor to reduce the input current during start up. When the converter starts this resistor is shunted by power relay.

All models have a “slow start” feature. To reduce input current during start up the output capacitors are charged “slowly” (approximately 0.1s).

### 10 Isolation voltage test

Each converter has been isolation tested in factory before deliveries see *Table 2*.

**Warning1. An isolation test shall only be performed by personnel aware of the dangers and hazards of the test.**


**Warning 2. Consecutive insulation test will damage the Y-capacitors provoking less EMC performance.**

Input code	Isolation In/out, In/case	Output voltage Vd.c.	Isolation out/case
24, 48, 72,	2.5kVd.c.	24, 48	2.5kVd.c.
110, 220,	3kVa.c.	24, 48	2.5kVd.c.

**Table 2. Isolation voltages on different converters.**

#### 10.1 DC isolation test output to case


1. Disconnect all cables from the converter.
2. Connect the input terminals of the converter to case.
3. Connect the output terminals together. Connect your isolation tester between output and case. See *Figure 6*.
4. Raise the voltage of the isolation tester from 0 to 2500Vd.c. Check that the leakage current does not exceed 5µA. The voltage should not be applied for more than a few seconds or the Y-capacitors might be damaged.
5. Turn off the isolation tester and discharge the test voltage with a 10 MΩ resistor between output and case.

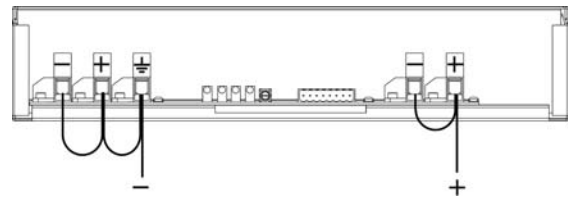

**Figure 6. Output to case isolation voltage test.**

#### 10.2 DC isolation test input to output and input to case

1. Disconnect all cables from the converter.
2. Connect the output terminals of the converter to case.
3. Connect the input terminals together.
4. Connect your isolation tester between input and case. See *Figure 7*. Raise the voltage of the isolation tester from 0 to 2500Vd.c. Check that the leakage current does not exceed 5µA. The voltage should not be applied for more than a few seconds or the Y-capacitors might be damaged.
5. Turn off the isolation tester and discharge the test voltage with a 10 MΩ resistor between input and case.

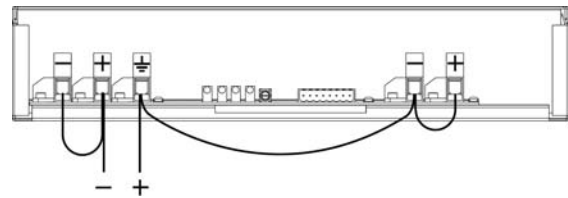

**Figure 7. Input to output and input to case isolation voltage test.**

#### 10.3 AC isolation test input to output and input to case

You can also test 3000Va.c. for one (1) minute between input to output and case on units with input codes 110, 220.

**Beware of the rather high capacitive earth currents (about 100mA) that will occur during this test.**

If your isolation test equipment cannot supply this current, you can perform a DC isolation test with 4300Vd.c. Follow the instructions in *10.2 DC isolation test input to output and input to case*, but test with 4300Vd.c. instead

of 2500Vd.c. The leakage current should not exceed 5 $\mu$ A.

AC isolation test:

1. Disconnect all cables from the converter.
2. Connect the output terminals of the converter to case. See *Figure 7*.
3. Connect the input terminals together.
4. Connect your isolation tester between input and case. See *Figure 7*. Raise the voltage of the isolation tester from 0 to 3000Va.c. The voltage should not be applied for more than one (1) minute or the Y-capacitors might be damaged.
5. Turn off the isolation tester and discharge the test voltage with a 10 M $\Omega$  resistor between input and case.

## 11 Maintenance

A converter that includes a fan has to be subject to maintenance. The fan needs to be replaced by a new one every 5 year. Instruction how to replace it, see *Figure 8*.

The fan has article. no. 203330 and can be ordered from Polyamp AB, address see below.

## 12 Trouble shooting

### 12.1 There is no output voltage

1. Check that the input fuse is not broken.
2. Check that the input voltage polarity is correct.
3. Check that the input voltage is within the specified limits, see front label.
4. If only the red "REG NOT OK" LED is lit, the converter may be in current limit due to excessive output current or an external short-circuit on the output.

- Disconnect the input.
- Disconnect the load.
- Connect the input again and measure the output voltage.

If the converter now starts the load was too heavy or there was a short-circuit.

- If there is an external short-circuit, remove it.
- If the load is too large decrease the load or consult your Polyamp dealer.

5. Check that the "INHIBIT" input is not short-circuited. See *7 Inhibit* on page 9.

6. Check that the "SENSE" is connected correctly. See *6 Sense* on page 9.
7. The unit is broken. Contact your Polyamp dealer.

### 12.2 The input fuse blows when the input is connected

1. Check that the input voltage polarity is correct.
2. Check that the input fuse is of time delay type and with correct current rating. See *Table 1*. All models have "inrush current limit". For further information consult *9 Inrush current* limit on page 10.
3. The unit is broken. Contact your Polyamp dealer.

### 12.3 The converter starts and stops repeatedly

All models have an over/under voltage protection on input which shuts down the converter if the input voltage is not within specified limits (see front label).

1. The cables to the converter input may be under-sized, causing too high voltage drop in the supply cables.
2. Check that there is not excessive voltage drop in the external input disconnecting device or in the input fuse holder due to bad contact.
3. Your supply does not have enough current capacity so the input voltage to the converter drops below specified limit.

### 12.4 The converter stops after several hours

If the red "OVER TEMP" LED is lit, the unit has not sufficient cooling or the ambient temperature is too high.

- See *5.2 Over temperature* on page 9 for further information.
- If the converter includes a fan. Check that it is working. If not, replace it. See *11 Maintenance*.

### **12.5 Fault report**

We suggest that you return a faulty converter to:

POLYAMP AB  
Bäckgatan 10  
SE 597 53 ÅTVIDABERG  
SWEDEN

Telephone: +46 120 85400  
Telefax: +46 120 85405  
Email: [info@polyamp.se](mailto:info@polyamp.se)  
[www.polyamp.com](http://www.polyamp.com)

Or to your local Polyamp distributor.

To help us locate the fault, please describe the fault and how and when it occurred.



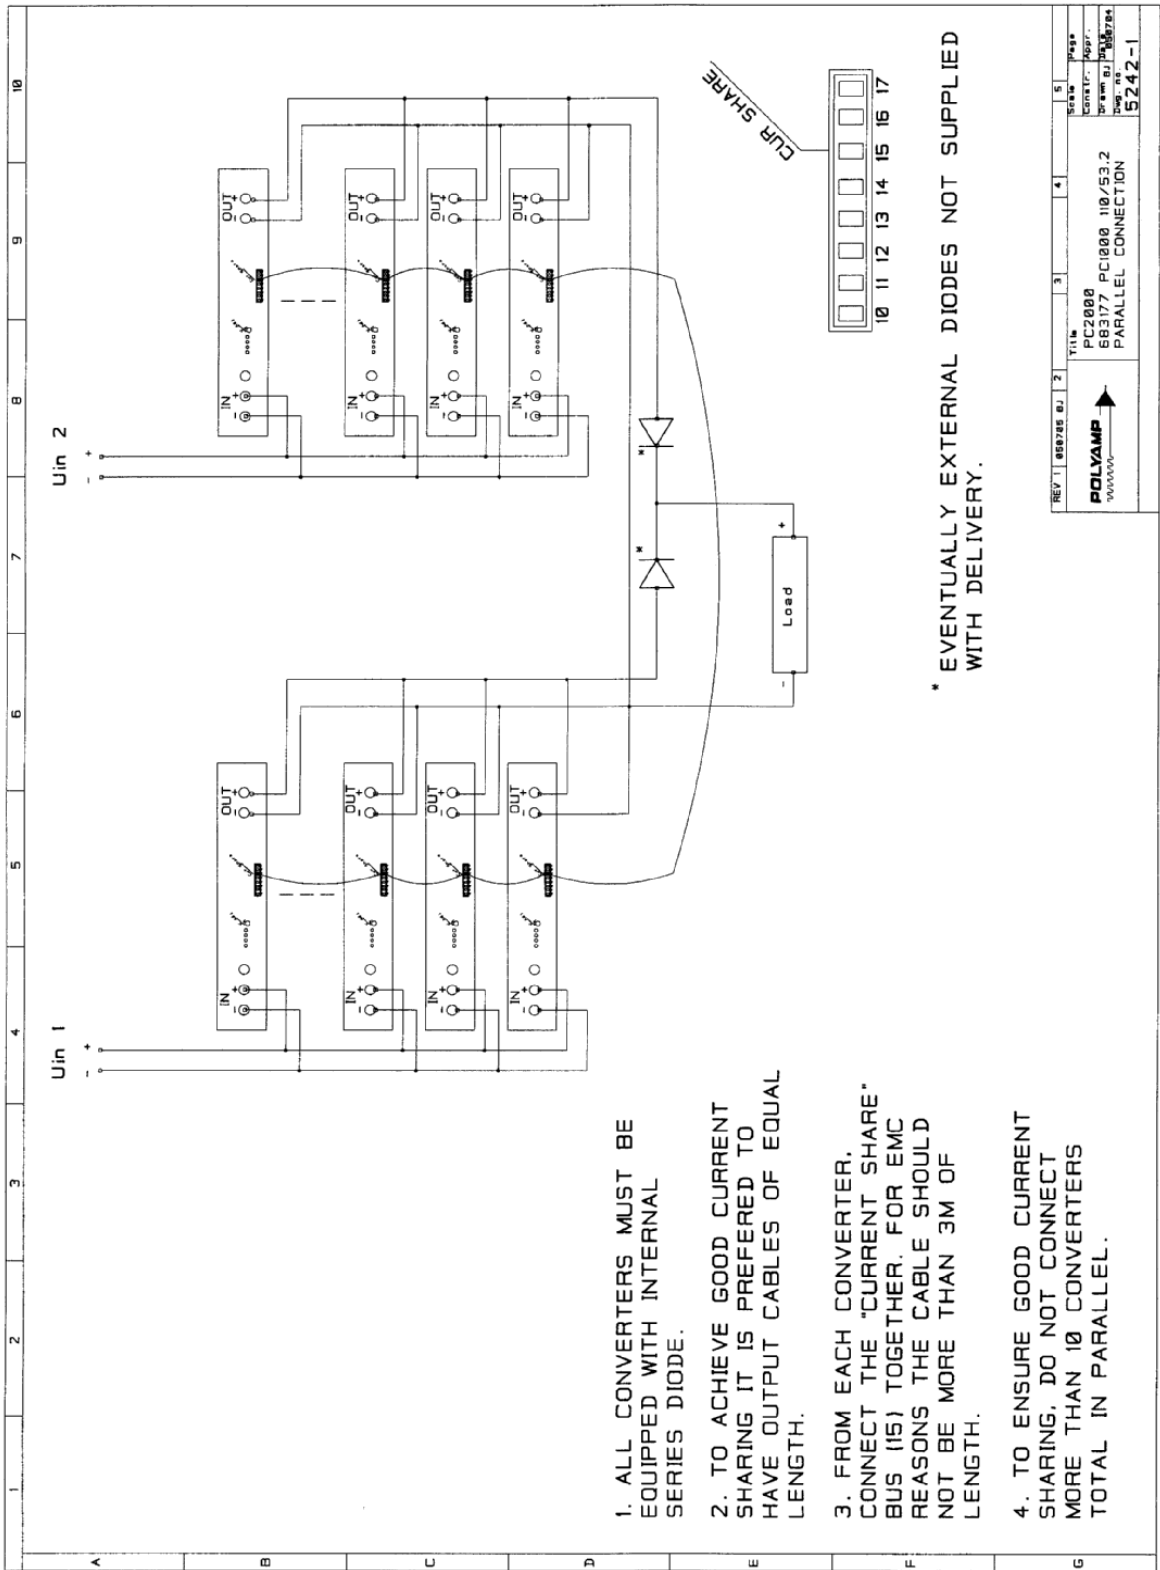


Figure 9. Two supply systems with common load and parallel converter outputs.